


Intro HD Progressive Lens Layout Chart

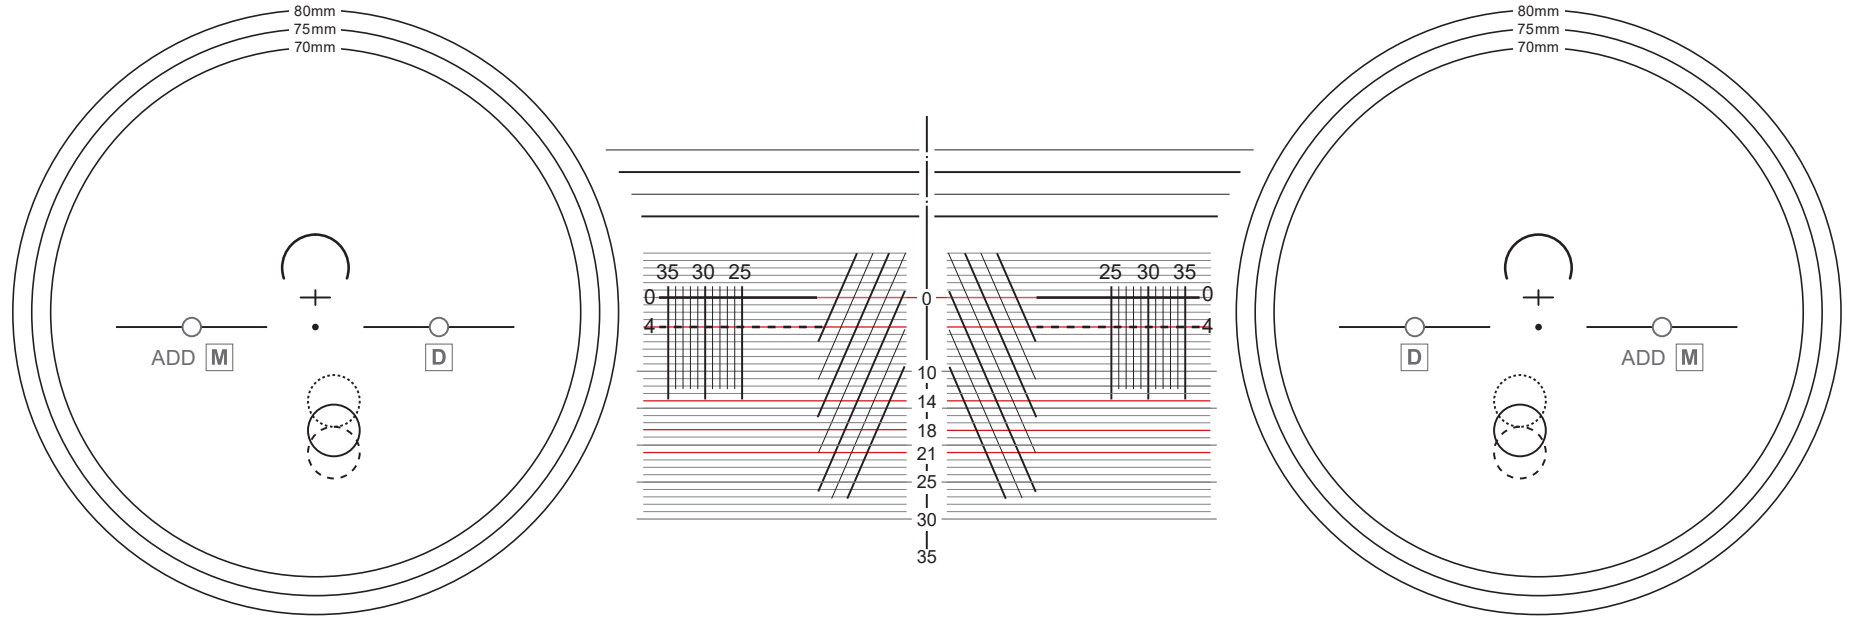

Design Code

- AV = Short (14)
- BV = Medium (18)
- CV = Long (21)



Material Code

- H = 1.50 Hard Resin
- F = 1.60 High Index
- M = 1.67 High Index
- J = 1.74 Super High Index

ADD Addition Power (two digit)