


SuperDigital Progressive Lens Layout Chart

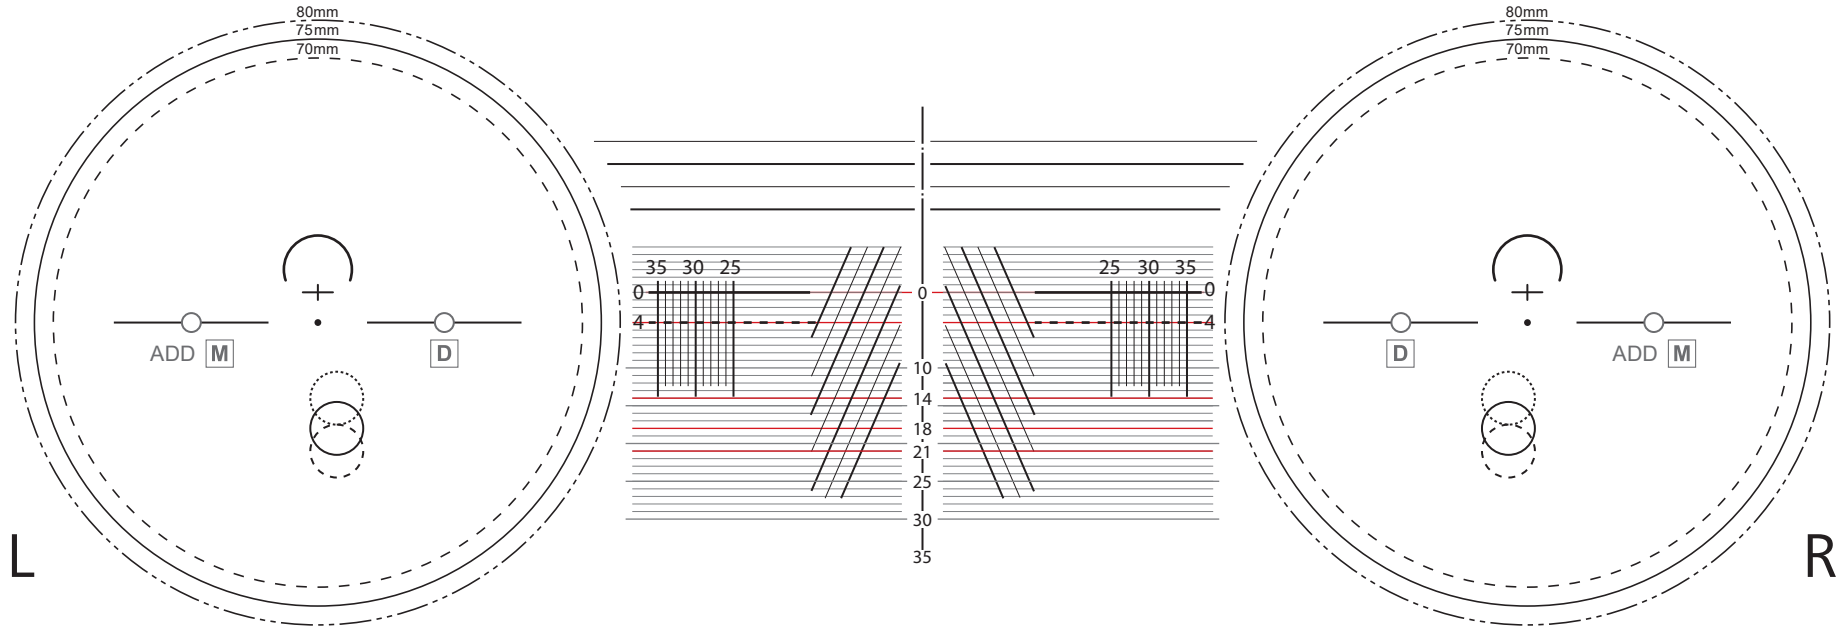

D Design Code
 D1 = SuperDigital A
 D2 = SuperDigital B
 D3 = SuperDigital C

M Material Code
 H = 1.50 Hard Resin
 F = 1.60 High Index
 M = 1.67 High Index
 J = 1.74 Super High Index

ADD = Addition Power (two digit)